


CRWSSR


— A MARITIME STATEMENT —

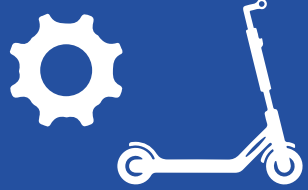

APPENDIX: NEW CRWSR STEERING FUNCTIONS:

Pushing Support:

To make it easier to push the scooter (e.g. uphill), the push assistance can be activated. This gives you a slight motor support. To do this, simply press and hold "-". ATTENTION: the scooter will start moving immediately.

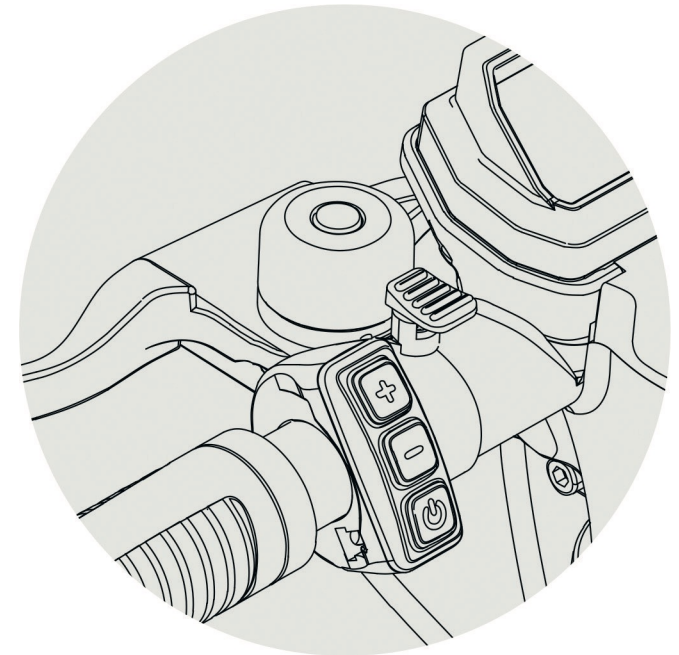

Deactivating/activating the code request:

To deactivate/activate the code request, simultaneously hold down the "ON/OFF" and the "+" button for 10 seconds. Deactivation / Activation is confirmed by a signal tone.



CRWSR E-Mobility SL

Calle Monte Alto 17
28250 Torreldones
MADRID/SPANIEN
www.CRWSR.com
hello@CRWSR.com

Alle Markenzeichen, Logos, Typbezeichnungen und Embleme
sind durch die CRWSR E-Mobility SL geschützt.

Die in dieser Bedienungsanleitung enthaltenen Informationen sind
zum Zeitpunkt des Drucks freigegebene technische Spezifikationen.
Bedeutende Veränderungen werden in einer neuen Ausgabe der
Bedienungsanleitung berücksichtigt und ebenso wie sicherheitstechnisch
nicht relevante Änderungen unter folgender Internetseite
veröffentlicht: <http://www.crwsr.com/support>